



Parts Identification

- | | | | |
|-------------------------------|--------------------------------|--|-------------------------------------|
| 1. Hopper Lid | 7. Adjustable Portafilter Hook | 13. Memory Preset Buttons & Indicators | 18. Installation/Removal Tab (blue) |
| 2. Bean Hopper | 8. Convertible Device Arms | 14. Grinding Indicator | 19. Installation/Removal Indicator |
| 3. Bean Shutoff Knob | 9. Grounds Bin | 15. Stop | 20. Macro Adjustment (black) |
| 4. Hopper Alignment Indicator | 10. Power Cord Port | 16. Start/Pause | 21. Stepless Micro Adjustment |
| 5. Control Panel | 11. Removable Grounds Tray | 17. Grind Weight Adjustment Buttons | 22. Bag of Tools |
| 6. Grind Adjustment Assembly | 12. LCD Display | | |

This is a quick start guide only. Detailed instructions can be found in the full manual on our website at baratza.com/documentation

INITIAL SETUP

1. Hand-wash the hopper lid (1), bean hopper (2), grounds bin (9), and removable grounds tray (11) in warm, soapy water, and dry thoroughly. Do not wash the grind adjustment assembly (6) in water or it will rust.
2. With the bean shutoff knob (3) facing the 11 o'clock position, line up the 3 hopper tabs with the slots in the top of the grinder. Set the hopper in place and rotate firmly clockwise until the hopper clicks into place. Install hopper lid (1) onto bean hopper (2). Rotate macro adjustment until black grind setting indicator is on 18. **Note: The hopper must be installed and the black grind setting indicator (20) on a setting of 31 or smaller for the motor to start. Ensure the shutoff knob (3) is in the open position.**

Screen Operation: Weight Based Grinding

Press a preset button 1, 2, 3 (13) to display the corresponding pre-programmed grind weight in grams on the screen (12). When you are ready to grind, press the START button (16). While grinding, the screen will count UP in grams. When the screen reaches the preset weight, the motor will stop and the display will reset again to the programmed weight. For manual quantities of ground coffee, press and hold the START button until you obtain the desired amount of coffee. Release the START button to stop the grinder. The screen will show the total amount in grams. To get out of the manual mode, press STOP (15). see programming information on next column for programming personal settings.

Macro/Micro Grind Size Adjustment:

The macro adjustment (20) moves from coarse #31 to fine #1. The micro adjustment (21) is the bottom ring, from finer "A" to coarser "I". For espresso: start at 9E, for manual brew: start at 20E. We recommend you have the motor running while adjusting your grind.

Convertible Device Holder:

The black arms (8) that hold the grounds bin (9) can also be used to hold a variety of brewing devices. To convert the arms to hold a portafilter, push in on the **right arm** and swing it down and to the left. To convert the arms to hold the grounds bin or other brewing devices, push in on the **right arm** and rotate to the right and up. The left arm will automatically move into position. In the center, above the arms, is a hook (7) for holding the lip of your portafilter to provide stability. This hook can be rotated out of the way by pressing down on the hook and then rotating it left or right. To return the hook to the center position simply press down and rotate it back to center.

The Portafilter Hook: Critical when grinding for espresso

When grinding directly into a portafilter, you must first convert the arms to portafilter mode and swing the hook (7) to the front. The hook is designed to support the top lip of your portafilter. It is important that your hook is adjusted so that your portafilter sits level. To adjust the hook, loosen the 2mm hex screw (included in the bag of tools (22)) that sits below the hook, adjust portafilter hook up or down, and tighten screw at the proper position. If your grinder is under-dosing, most likely your hook needs further adjustment.

WARNING: The Sette grinds at a very high speed, be careful not to overfill your portafilter or bin! If a mound of coffee backs up into the chute it will clog the grinder.

Programming:

The Sette 270Wi is equipped with three programmable buttons (13). The buttons are simply labeled 1, 2, 3. These programmable buttons only adjust the desired grind weight, they do not adjust the grind setting (i.e. coarse/fine). Each button comes from the factory with the following presets: Weight: 1=18g, 2=25g, 3=35g.

You can easily program more or less grams as follows:

1. Select a preset button.
2. Press the up or down arrow buttons to adjust the weight.
3. Once you have reached the desired gram setting, press and hold the desired preset button for 3 seconds. The screen will blink to confirm the setting is stored.
4. To program the other buttons repeat steps 1-3. **NOTE: 5g minimum for preset mode: The software prevents users from setting a preset below 5g. Due to the speed of the grinder, it is unable to be accurate for weights less than 5g.**

Bag of Tools:

We have included a small bag with tools and shims (22).

- Shims used for recalibrating the machine to a finer range.
- 2mm hex key used for adjusting the portafilter hook.
- 5mm hex key used for removing the cone burr from the holder when shimming (see manual).

Need Help?

If you have any questions or concerns, please email: support@baratza.com or call (425) 641.1245

The full manual can be found on our website at: baratza.com/documentation

For video instructions and troubleshooting guides: baratza.com/troubleshooting

SAFETY INFORMATION:

- ! Please read the information below very carefully. It contains important safety information for this appliance. Please keep these instructions for future reference.
- ! Use only with AC current and the correct voltage. See the label on the base of the grinder to determine the correct voltage.
- ! Only clean the grinder housing with a dry or slightly damp cloth. Do not immerse the grinder, plug or cord in water or any other liquid.
- ! Baratza will not accept any liability for damage, injury, or warranty if the grinder is used other than for its intended purpose (i.e. grinding roasted whole coffee beans) or is improperly operated or repaired.
- ! Keep the appliance and its cord out of reach of children aged less than 8 years
- ! Do not operate the grinder with a damaged cord or plug. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard
- ! Do not leave your grinder unattended while turned ON.
- ! This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- ! Cleaning and user maintenance shall not be made by children without supervision.
- ! Always unplug the grinder from the electrical supply before assembling, disassembling or cleaning.
- ! To unplug, grasp plug and remove from the outlet. Never pull on the cord.
- ! **CAUTION: ALWAYS unplug the electrical supply cord prior to cleaning the grinder.**